

# **Mounting Configuration**


## 5GHz 23dBi Flat Panel Directional Antenna

## **Pole Mount**


There are up/down and left/right tilting features for both vertical and horizontal polarization orientations.

Please make sure you have installed the ANT-FP23A of the same polarization with the other corresponding antenna of the outdoor AP.


Vertical Polarization Vertical Pole Mounting:

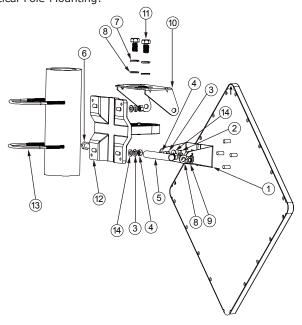


Vertical Polarization Horizontal Pole Mounting:

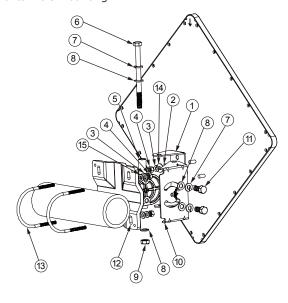

Horizontal Polarization Horizontal Pole Mounting:

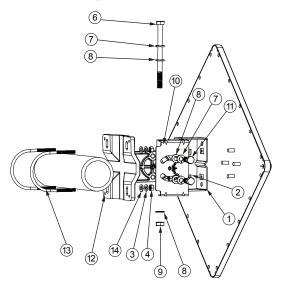

1. M-Type Bracket (L) 1Pcs 2. Space Keeper 2Pcs 3. Spring Washer 6Pcs 4. M6-1.0 Nut 6Pcs 5. Steel Tube 93.2 mm 1Pcs 6. XHM8-1.25 x 120 1Pcs 7. M8 Spring Washer 3Pcs 8. M8 Washer 4Pcs Horizontal Polarization Vertical Pole Mounting:

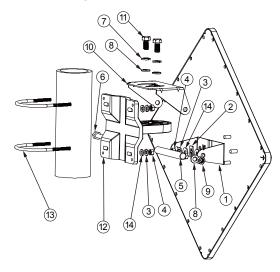

9. M8 Nut	1Pcs
<ol><li>Rotating Bracket</li></ol>	1Pcs
11. XHM8-1.25 x 20	2Pcs
12. Mounting Main Frame	1Pcs
13. U-Type Screw	2Pcs
14. M6 Washer	6Pcs



Mounting pole diameter: 2"~3"



## **Mounting Configuration**


#### 5GHz 23dBi Flat Panel Directional Antenna

## **Wall Mount**

There are up/down and left/right tilting features for both vertical and horizontal polarization orientations.


Please make sure you have installed the ANT-FP23A of the same polarization with the other corresponding antenna of the outdoor AP.

Vertical Polarization Wall Mounting:

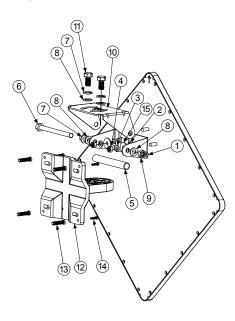

1.	M-Type Bracket (L)	1Pcs
2.	Space Keeper	2Pcs
3.	Spring Washer	6Pcs
4.	M6-1.0 Nut	6Pcs
5.	Steel Tube 93.5 mm	1Pcs
6.	XHM8-1.25 x 120	1Pcs
7.	M8 Spring Washer	3Pcs
8.	M8 Washer	4Pcs

Horizontal Polarization Wall Mounting:

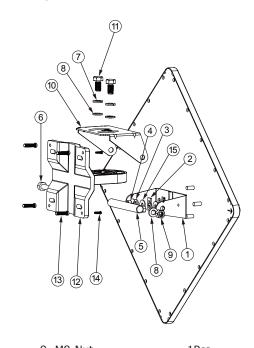

9. M8 Nut	1Pcs
10. Rotating Bracket	1Pcs
11. XHM8-1.25 x 20	2Pcs
12. Mounting Main Frame	1Pcs
13. Wall Tiger	4Pcs
14. TH 5/32-16 x 1"	4Pcs
15. M6 Washer	2Pcs



## **OUTDOOR INSTALLATION WARNING**

#### **IMPORTANT SAFETY PRECAUTIONS:**

**LIVES MAY BE AT RISK!** Carefully observe these instructions and any special instructions that are included with the equipment you are installing.

#### CONTACTING POWER LINES CAN BE LETHAL.

Make sure no power lines are anywhere where possible contact can be made. Antennas, masts, towers, guy wires or cables may lean or fall and contact these limes. People may be injured or killed if they are touching or holding any part of equipment when it contacts electric lines. Make sure there is NO possibility that equipment or personnel can come in contact directly or indirectly with power lines.

Assume all overhead lines are power lines.

The horizontal distance from a tower, mast or antenna to the nearest power line should be at least twice the total length of the mast/antenna combination. This will ensure that the mast will not contact power if it falls either during installation or later.



Part No: 2011-E30240-000