

300Mbps
WNAP-1260

Wall Plug Universal WiFi Repeater

Quick Installation Guide



1. Package Contents

Thank you for choosing PLANET WNAP-1260. Before installing the Repeater, please verify the contents inside the package box.

WNAP-1260

Quick Guide

CD-ROM

Ethernet Cable



If there is any item missed or damaged, please contact the seller immediately.

2. Default Settings

Default IP: 192.168.1.253

Default SSID: WiFiRepeater-001


Default Mode: Repeater

Username: admin

Password: admin

- 1 -

4. Quick Installation – Repeater Mode

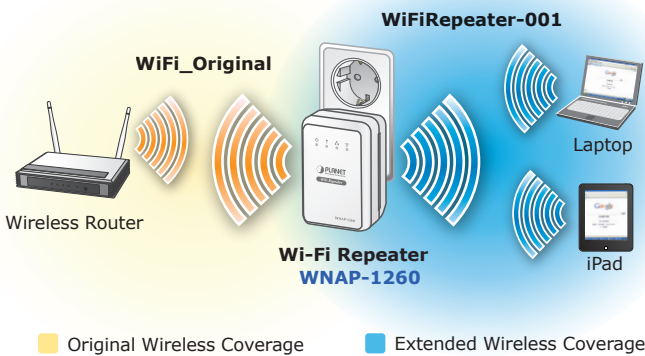


SSID of Existing Wireless network: **WiFi_Original**

SSID of Extended Wireless: **WiFiRepeater-001**

Option A: Automatic Connecting with WPS Push Button


STEP 1: Make sure the operation mode by hardware switch is Repeater Mode (Default Setting).

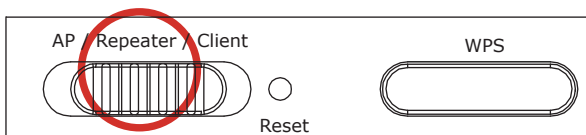


- 3 -

3. Physical Introduction

LED Description

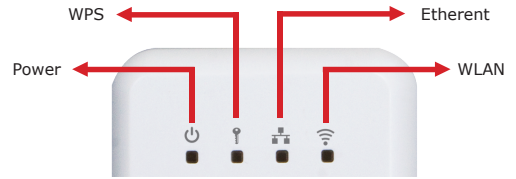


Port Description

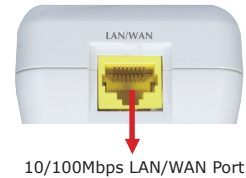

Switch & Button Description

The Switch of AP, Repeater and Client Modes

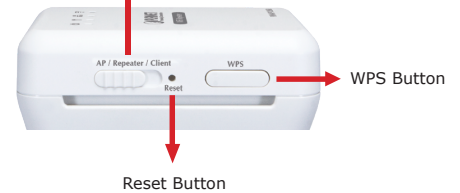


- 2 -

STEP 2: Plug WNAP-1260 into the wall outlet, and wait about 40 seconds for WNAP-1260 to boot up.

STEP 3: Using WPS Button to establish connection with AP.


1. In the existing Wireless Router or AP, push the **WPS Button** within 2 minutes.

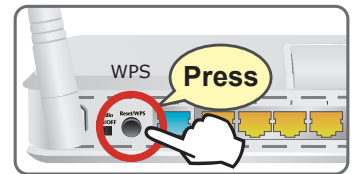

2. In the WNAP-1260, push the **WPS Button** from the side panel within 2 minutes.



3. Wait for the connection being established. If connection is successfully established, the "WPS" LED will light for 5 minutes.

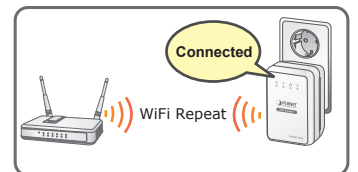

For the first time setup, you can move WNAP-1260 close to the access point you wish to connect, after connection established, you can move WNAP-1260 to the place you wish to use.

- 4 -

Option B: Manual Connecting use Web Browser

STEP 1: Plug WNAP-1260 into the wall outlet, then please use your PC to site survey the wireless signal of WNAP-1260, and connect your PC with it wirelessly.


Default SSID of Extended Wireless: **WiFiRepeater-001**
Default Wireless Security: **No Security**



STEP 2:

1. Assign a static IP address to your PC which should be in the same network segment with the WNAP-1260. You may choose from 192.168.1.2 to 192.168.1.254, except the default IP address "192.168.1.253" of WNAP-1260.
2. Open the web browser on your PC, key in the IP address (Http://192.168.1.253) of the WNAP-1260 in the address bar, and then press enter.
3. The default User name and Password are both "admin". Enter them and then click **OK**.

- 5 -

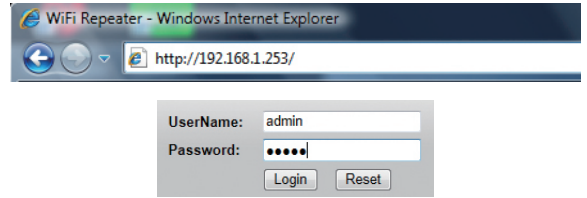

Default IP Address: **192.168.1.253**
Default Username: **admin**
Default Password: **admin**
Default SSID: **WiFiRepeater-001**

STEP 3: When you have successfully logged in, select "Setup wizard". You will then be able to select one of two options, choose "Wireless Universal repeater mode" and click next to continue.

STEP 4: All wireless access points nearby will be displayed on the list. Select it and click 'Next' button to continue.

Site Survey						
Number of Sites Scanned :						8
Site Survey List						
#	SSID	BSSID	Channel	Signal	Encrypt	Select
1	WiFi_Original	00:30:4F:11:22:33	11	100%	WPA2-PSK(AES)	<input checked="" type="radio"/>
2	C3220	00:30:4F:81:86:34	11	86%	WPA-PSK(AES)/WPA2-PSK(AES)	<input type="radio"/>

- 6 -

STEP 5: You'll be prompted to input Uplink Wireless Router/AP's wireless security key, input it in 'PassPhrase' field and click 'Next' to continue.

Wireless Client Security Options

Wireless Client Security Options : WPA2-PSK(AES)

Security Options(WPA2-PSK)

PassPhrase : PlanetWiFi (8-63 characters or 64 hex digits)

Back Next

STEP 6: WNAP-1260 provides the wireless roaming function if you select "Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options". Click Finish. Then, the client can communicate with the selected network.

Wireless Universal Repeater Settings

Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options

SSID of Extended Interface : WiFiRepeater-001

Security Options : none

Note: If you changed settings of wireless universal repeater, the wireless clients connecting to your wireless universal repeater need connect to wireless universal repeater with new SSID and security options again.

Back Finish Cancel

You have already finished the wireless range extension configuration of the WNAP-1260. Now you can use your iPhone, iPad, laptop, and any other Wi-Fi devices to connect with it wirelessly and start to surf the Internet.



If you change the setting of wireless universal repeater through wireless connection, the wireless clients connecting to your WNAP-1260 need connect to WNAP-1260 with new SSID and security options again.


- 7 -

5. Wireless Network Connection

STEP 1: Right-Click on the **network icon** displayed in the system tray.



STEP 2: Highlight the wireless network (SSID) to connect and click [Connect].

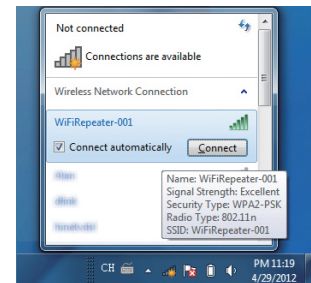

STEP 3: Enter the **encryption key** of the WiFi Repeater (WNAP-1260).

FURTHER INFORMATION:

The above steps introduce simple installations and configurations for WNAP-1260. For further configurations of different operation modes, please refer to the user's manual in the CD. If you have further questions, please contact the local dealer or distributor where you purchased this product.

2011-E10450-000

- 8 -