

**8-/16-/24-Port Gigabit 802.3bt PoE++
Managed Injector Hub**

UPOE-800G/UPOE-1600G/UPOE-2400G
Quick Installation Guide

Table of Contents

1. Package Contents	3
2. Requirements	4
3. Starting Web Management	5
4. Recovering Back to Default Configuration.....	10
5. Customer Support	11

1. Package Contents

Thank you for purchasing PLANET 8-/16-/24-Port Gigabit **802.3bt PoE++ Managed Injector Hub**, UPOE-800G/UPOE-1600G/UPOE-2400G. “**802.3bt PoE++ Managed Injector Hub**” mentioned in this quick installation guide refers to the UPOE-800G/UPOE-1600G/UPOE-2400G.

Model Name	10/100/1000T Data + Power Output Ports	10/100/1000T Data Input Ports	10/100/1000T RJ45 Management Port
UPOE-800G	8	8	1
UPOE-1600G	16	16	1
UPOE-2400G	24	24	1

Open the box of the **802.3bt PoE++ Managed Injector Hub** and carefully unpack it. The box should contain the following items:

- The 802.3bt PoE++ Managed Injector Hub x 1
- QR Code Sheet x 1
- Power Cord x 1
- Rubber Feet x 4
- 19" Rack-mounting Brackets x 2

If any item is found missing or damaged, please contact your local reseller for replacement.

2. Requirements

- **Workstations** running Windows 7/8/10/11, macOS 10.12 or later, Linux Kernel 2.6.18 or later, or other modern operating systems are compatible with TCP/IP Protocols.
- Workstations are installed with Ethernet NIC (Network Interface Card)
- **Ethernet Port Connection**
 - Network cables -- Use standard network (UTP) cables with RJ45 connectors.
 - The above PC is installed with Web browser.



Note

It is recommended to use Google Chrome, Microsoft Edge or Firefox to access the **802.3bt PoE++ Managed Injector Hub**. If the Web interface of the **802.3bt PoE++ Managed Injector Hub** is not accessible, please turn off the anti-virus software or firewall and then try it again.



Caution

Do not connect any PoE PSE (e.g., PoE switch/injector/midspan) to the DATA IN / Ethernet port or in the data path of this PoE+ Managed Injector Hub. Such connection may interfere with PoE negotiation and may cause abnormal power delivery or permanent equipment damage. If unavoidable, ensure PoE is fully disabled on the external device; operation under this wiring is not guaranteed.

3. Starting Web Management

The following shows how to start up the **Web Management** of the **802.3bt PoE++ Managed Injector Hub**. Note the **802.3bt PoE++ Managed Injector Hub** is configured through an Ethernet connection. Please make sure the manager PC must be set to the same **IP subnet address**.

For example, the default IP address of the **802.3bt PoE++ Managed Injector Hub** is **192.168.0.100**, then the manager PC should be set to **192.168.0.x** (where x is a number between 1 and 254, except 100) and the default subnet mask is 255.255.255.0.

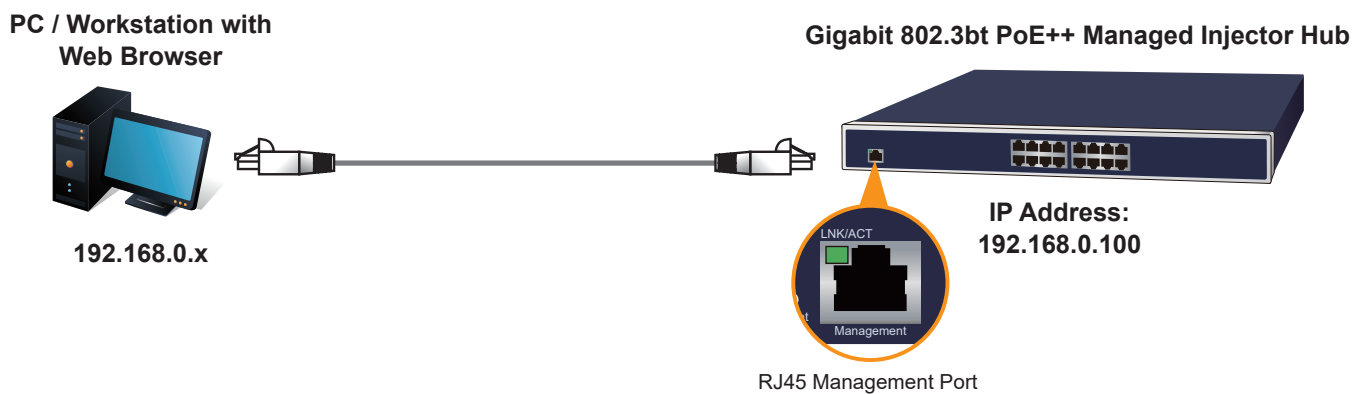 


Figure 3-1: IP Management Diagram

Logging in to the 802.3bt PoE++ Managed Injector Hub

1. Use Chrome 98.0.xxx or above Web browser and enter IP address **<https://192.168.0.100>** to access the Web interface.



Note

The following web screen is based on the firmware version before **March of 2024**.

2. When the following dialog box appears, please enter the default user name and password **"admin"**. The login screen in Figure 3-2 appears.

Default IP Address: **192.168.0.100**

Default Username: **admin**

Default Password: **admin**



Note

The following web screen is based on the UPOE-2400G. The displays of the UPOE-800G and UPOE-1600G are the same as that of the UPOE-2400G.

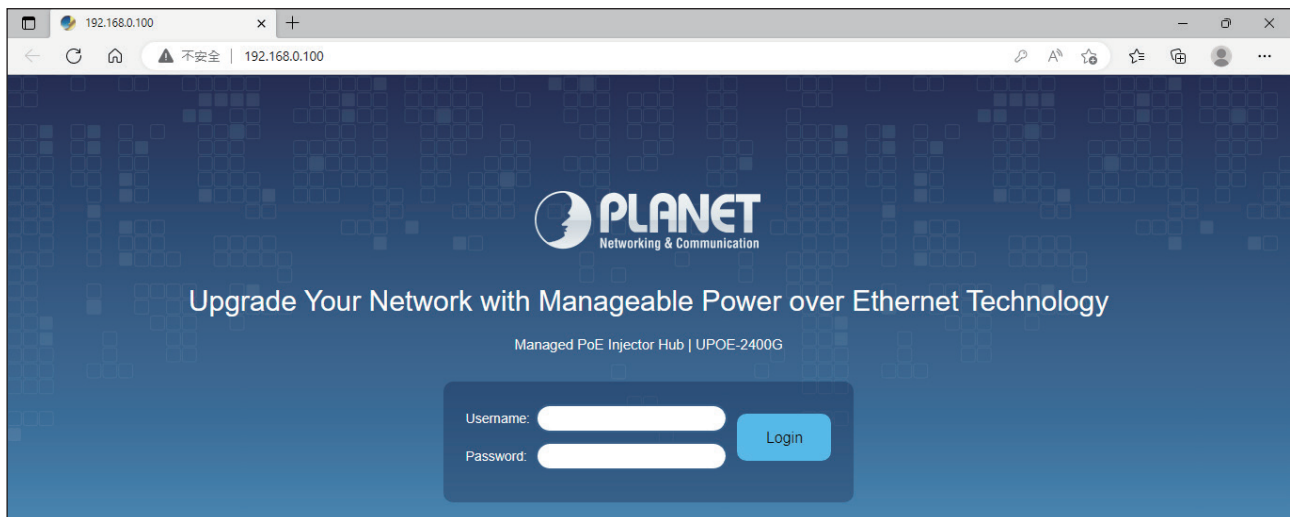 


Figure 3-2: Web Login Screen

3. After entering the password, the main screen appears as Figure 3-6 shows.



Note

The following web screen is based on the firmware version of **March of 2024 or after**.

 
- When the following dialog box appears, please enter the default user name "admin" and the password that is initially logged in to.

Default IP Address: **192.168.0.100**

Default User Name: **admin**

Default Password: **sw + the last 6 characters of the MAC ID in lowercase**

- Find the MAC ID on your device label. The default password is "sw" or "mc" followed by the last six lowercase characters of the MAC ID.

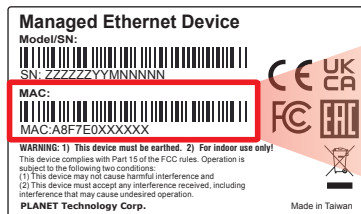

MAC ID: A8F7E0XXXXXX

Default Password: swxxxxxx

("x" means the last 6 digits of the MAC address.
All characters should be in lowercase.)

Figure 3-3: 802.3bt PoE++ Managed Injector Hub MAC ID Label


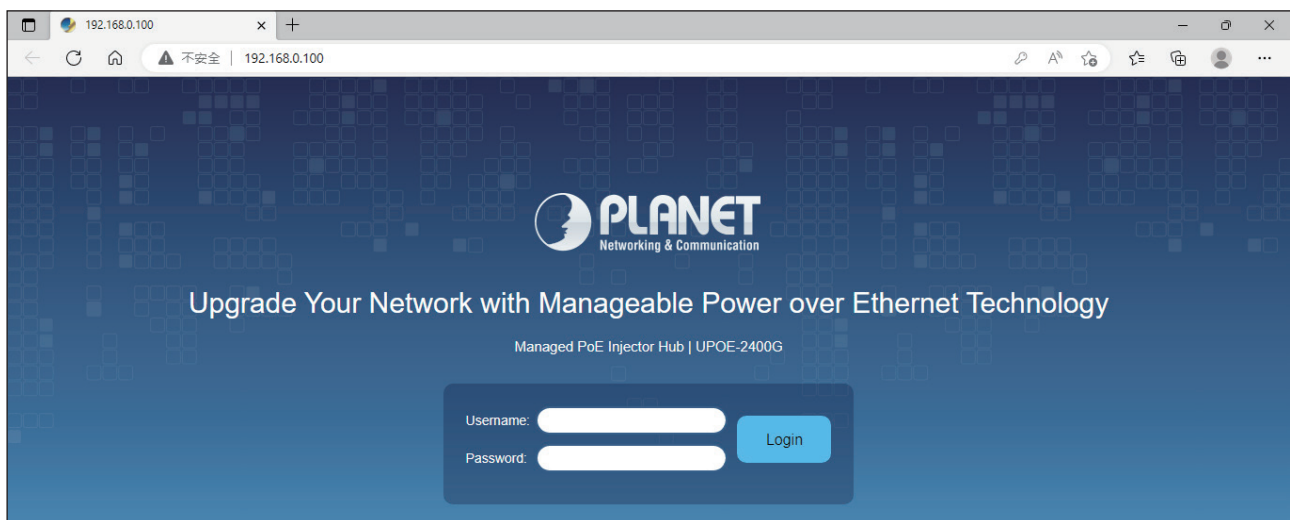 


Figure 3-4: Web Login Screen

 - After logging in, you will be prompted to change the initial password to a permanent one.

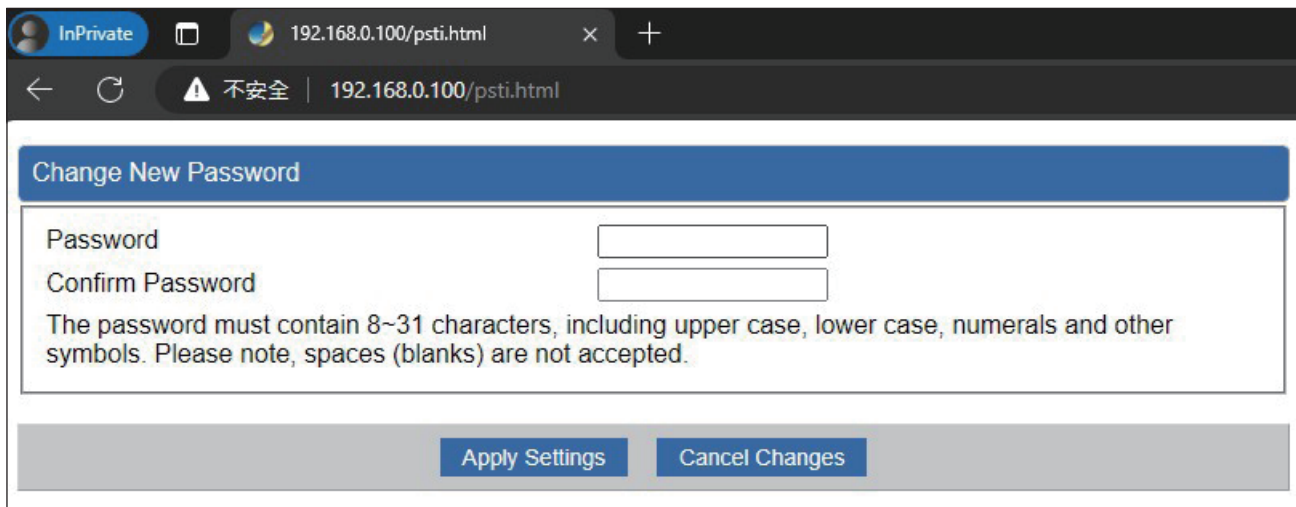

The screenshot shows a web browser window with the address bar displaying '192.168.0.100/psti.html'. The page title is 'Change New Password'. It contains two input fields for 'Password' and 'Confirm Password'. Below the fields, a text prompt states: 'The password must contain 8~31 characters, including upper case, lower case, numerals and other symbols. Please note, spaces (blanks) are not accepted.' At the bottom, there are two buttons: 'Apply Settings' and 'Cancel Changes'.

Figure 3-5: Create a New Password

- Enter the default username and password, then set a new password according to the rule-based prompt and confirm it. Upon success, press any key to return to the login prompt. Log in with "admin" and the "new password" to access the Web interface.

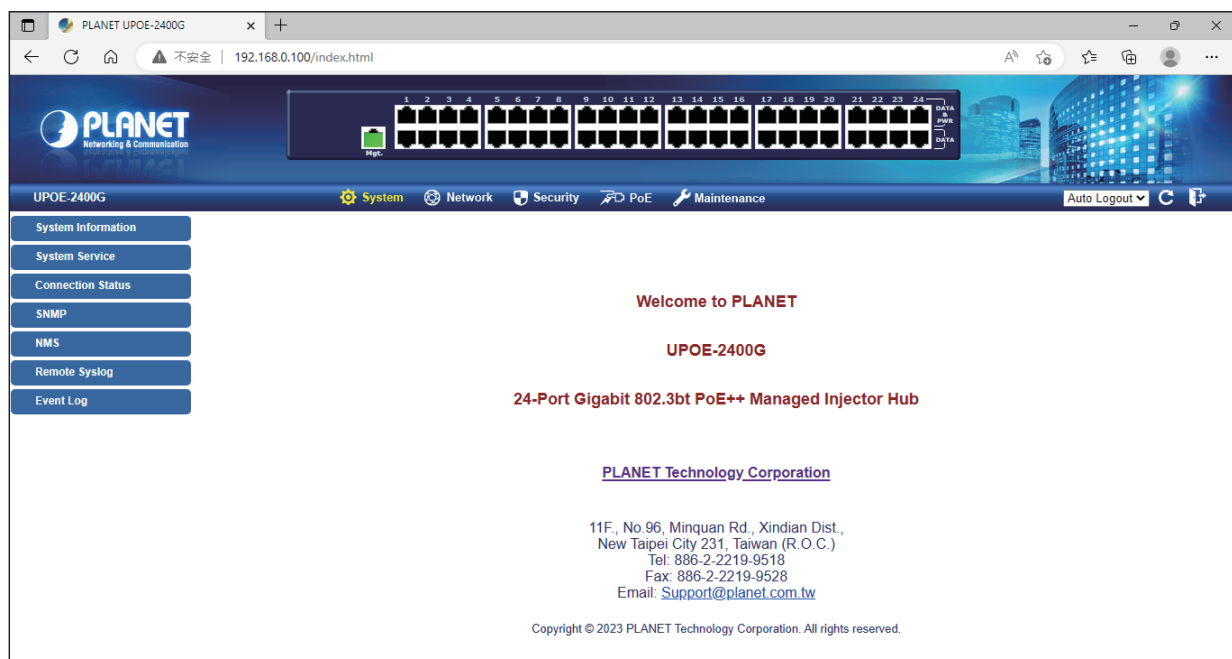 


Figure 3-6: Web Main Screen of 802.3bt PoE++ Managed Injector Hub

The **802.3bt PoE++ Managed Injector Hub** Menu on the top of the Web page lets you access all the commands and statistics the **802.3bt PoE++ Managed Injector Hub** provides. The **802.3bt PoE++ Managed Injector Hub** Menu always contains one or more buttons, such as “**System**”, “**Network**”, “**Security**”, “**PoE**” and “**Maintenance**”.



Figure 3-7: PoE+ Managed Injector Hub Menu

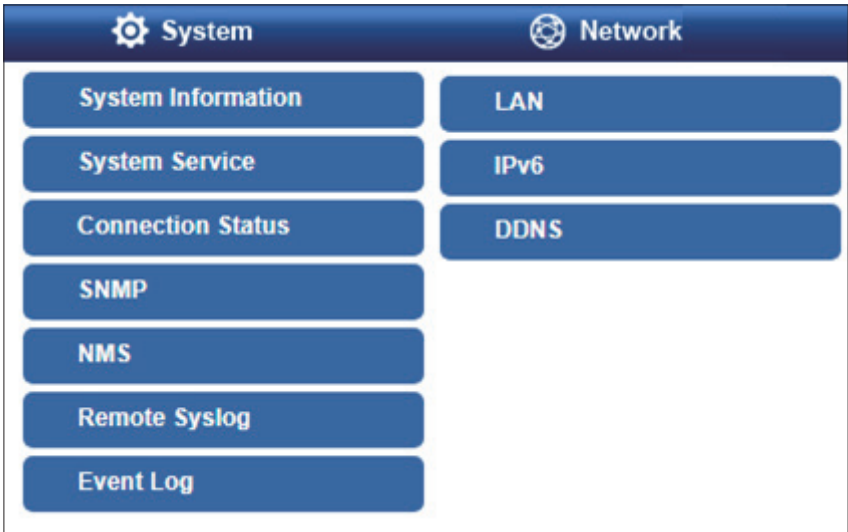 


Figure 3-8: 802.3bt PoE++ Managed Injector Hub Menu

The **802.3bt PoE++ Managed Injector Hub** comes with web-based management interfaces to easily manage the network. Please refer to the user’s manual for more.

4. Recovering Back to Default Configuration

■ IP Address has been changed or admin password has been forgotten –

To reset the IP address to the default IP address **"192.168.0.100"** and the user password to factory default mode (default password is sw + the last 6 characters of the MAC ID in lowercase), press the hardware-based reset button on the front panel for about 10 seconds. After the device is rebooted, you can log in the management Web interface within the same subnet of 192.168.0.xxx.

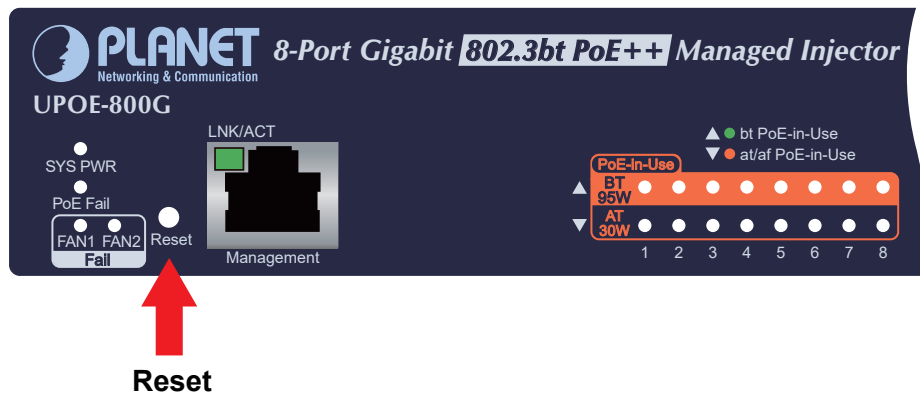 


Figure 4-1: 802.3bt PoE++ Managed Injector Hub Reset Button

5. Customer Support

Thank you for purchasing PLANET products. You can browse our online FAQ resource and User's Manual on PLANET Web site first to check if it could solve your issue. If you need more support information, please contact PLANET switch support team.

PLANET online FAQs:

<https://www.planet.com.tw/en/support/faq>

Switch support team mail address:

support@planet.com.tw

UPOE-800G/1600G/2400Gv3 User's Manual:

<https://www.planet.com.tw/en/support/downloads?&method=keyword&keyword=UPOE&view=3#list>



Copyright © PLANET Technology Corp. 2026.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp.

All other trademarks belong to their respective owners.

EU Representative

PLANET Technology Europe B.V.

Address: Posthoornstraat 11, 3011 WD Rotterdam, NL

Email: eu_rep@planet.com.tw

URL: www.planet.com.tw