

Industrial 5G NR Outdoor Unit (ODU)

FWA-2100-NR

Quick Installation Guide

Table of Contents

1. Package Contents	3
2. Requirement	4
3. Hardware Installation	5
3.1 SIM Card Installation	5
3.2 Wiring the Ethernet Cable Installation.....	6
3.3 Wall Hanging and Pole Mounting Installation	7
4. Starting Web Management	9
5. Recovering Back to Default Configuration.....	12
6. Discovery through PLANET NMS Controller.....	13
7. Customer Support	14



1. Package Contents

Thank you for purchasing PLANET Industrial 5G NR Cellular Outdoor Unit, FWA-2100-NR. The description of this model is as follows:

Model Name	Description
FWA-2100-NR	Industrial 5G NR Outdoor Unit (ODU) with 1-port Gigabit PoE PD

“5G ODU” is used as an alternative name in this Quick Installation Guide.

Open the box of the **5G ODU** and carefully unpack it. The box should contain the following items:

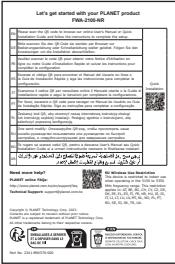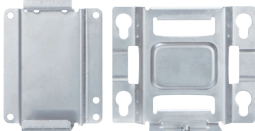5G ODU x 1	QR Code Sheet	Wall Bracket and Base x 1
		
RJ45	Wall-mounted Kit x 1	Pole Clamp x 1
		
Wired Waterproof Kit x 2	Waterproof Rubber Stopper	
		

If any item is found missing or damaged, please contact your local reseller for replacement.

2. Requirement

- Workstations running Windows 7/8/10/11, macOS 10.12 or later, Linux Kernel 2.6.18 or later, or other modern operating system are compatible with TCP/IP protocols.
- Workstations are installed with Ethernet NIC (Network Interface Card).
- Ethernet Port Connection
 - Network cables -- Use standard network (UTP) cables with RJ45 connectors.
 - The above PC is installed with Web browser and JAVA runtime environment plug-in.



Note

It is recommended to use Google Chrome, Microsoft Edge or Mozilla Firefox to access the 5G ODU. If the Web interface of the 5G ODU is not accessible, please turn off the anti-virus software or firewall and then try it again.



Note


Using either a PoE injector, a PoE switch, or a DC adapter (12V, 1.5A) for power supply ensures the device functions properly. Please note that these power supplies are not included in the package.

3. Hardware Installation


Refer to the illustration and follow the simple steps below to quickly install your **5G ODU**.

3.1 SIM Card Installation

A. Unscrew the two screws on the device's cover to remove the cover.

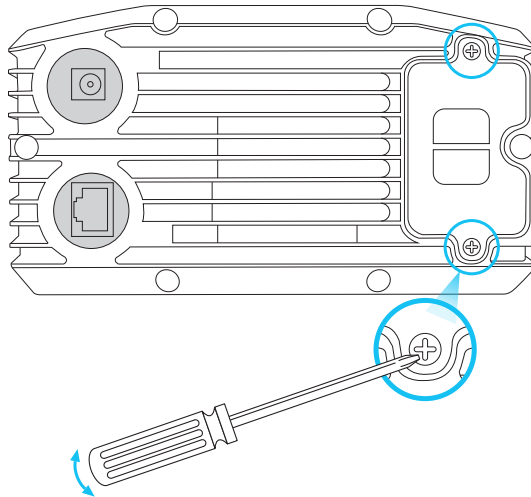


B. Insert the SIM card as directed by the SIM card interface.

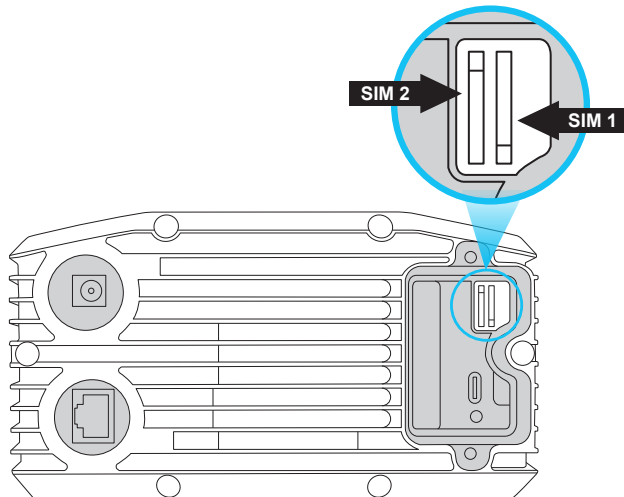


C. Put back the device's cover and tighten the screws.

A Nano SIM card with 5G NR and 4G LTE subscription

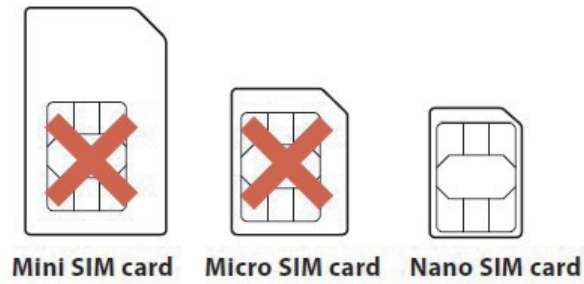

3.2 Wiring the Ethernet Cable Installation

By following the steps in the picture from left to right, put the network cable into the waterproof connector, and tighten the connector. Plug the cable into the device's LAN port, and tighten the waterproof connector with the device.

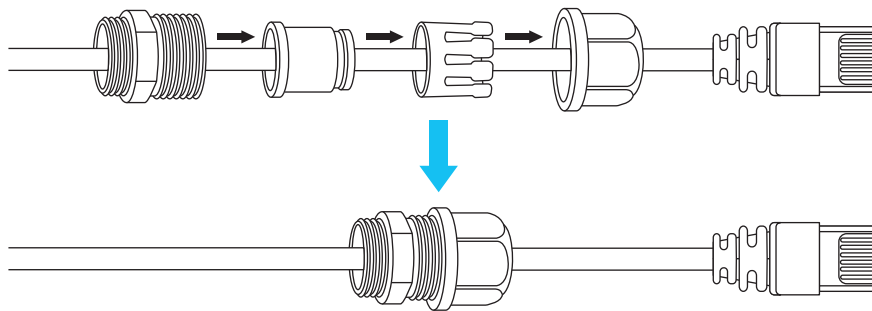

Plug the other end of the network cable into the PoE port of the PoE switch to finish the installation.




Please make sure that the waterproof connector is securely fastened with **5G ODU** to prevent internal water seepage.

3.3 Wall Hanging and Pole Mounting Installation

Wall hanging


Step 1: Lock the base to the device.

Step 2: Connect the wall bracket to the base and fasten the screws.

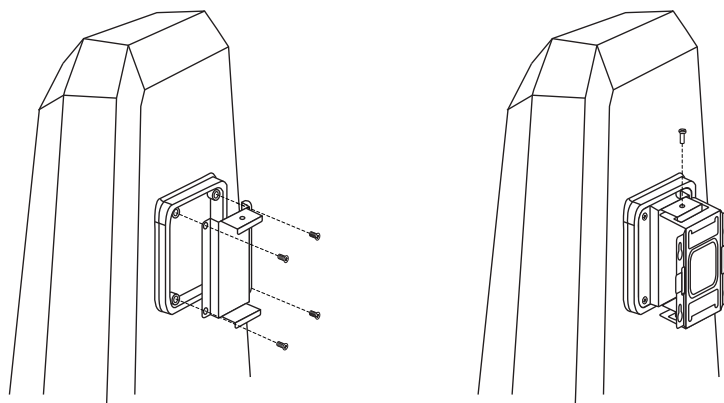


Step 3: Drill 4 holes with a **3mm** diameter on the wall. The horizontal and vertical distances between the 2 holes are **69.5mm** and **45mm**, respectively.

Step 4: Place four anchors inside the hole by hammering them. Then screw the four screws leaving a space of 2mm apart as shown in the diagram below.

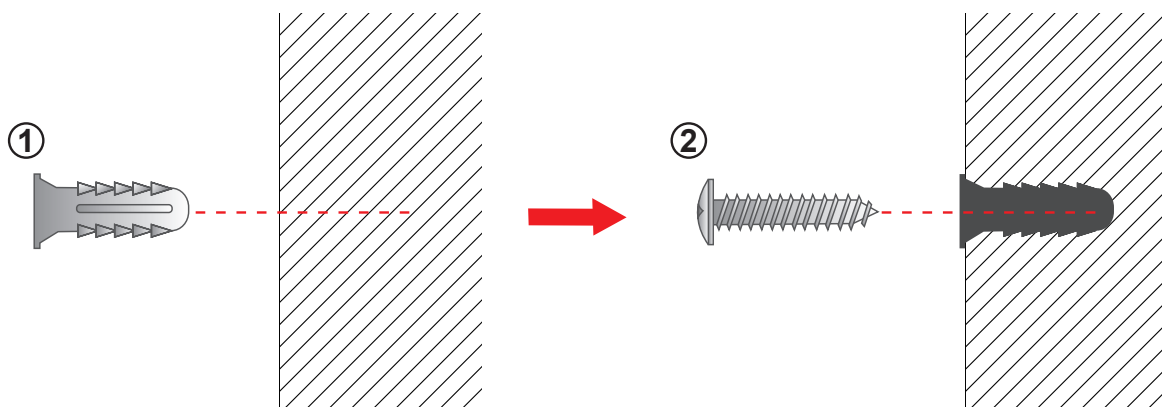


Step 5: The switch, shown in the picture below, can now be hung on the wall.

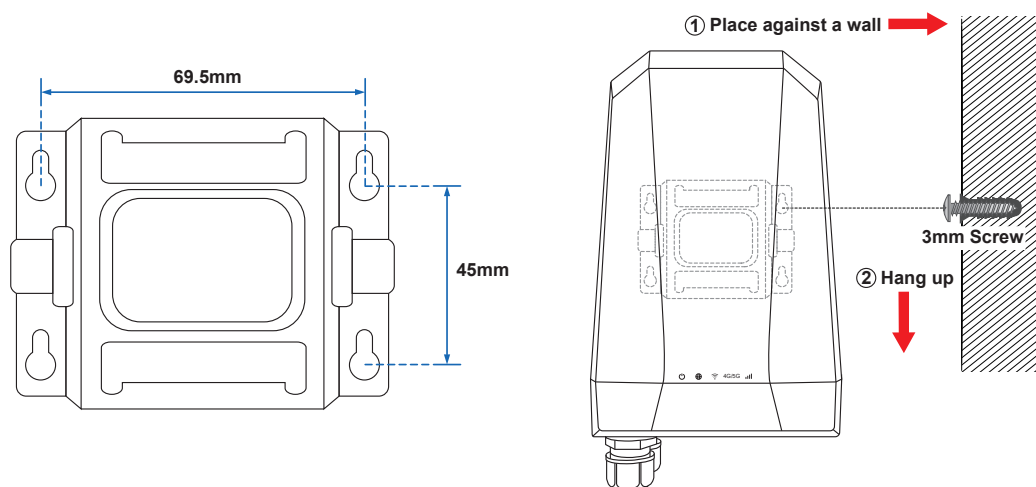

Pole mounting

To install the base and wall bracket, refer to **Step 1** and **Step 2** in Device Installation (Wall Hanging).

Step 6: The pole clamp goes through the hole of the wall bracket, and is wrapped around the pole. To finish the installation, fasten the clamp.

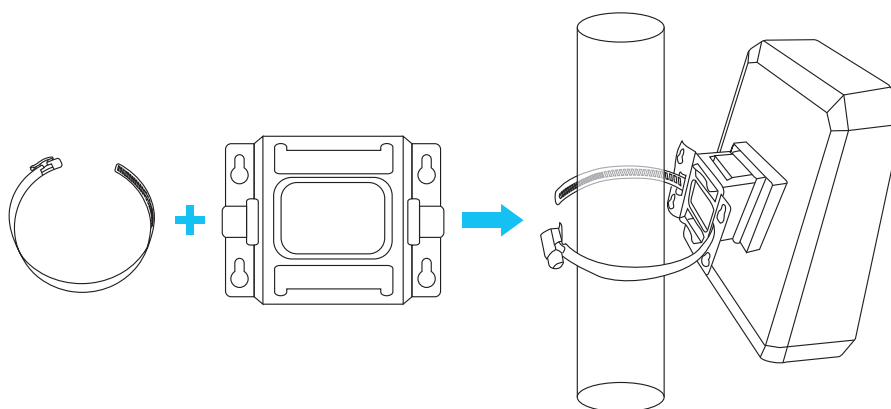

4. Starting Web Management

The following shows how to start up the **Web Management** of the **5G ODU**. Note the **5G ODU** is configured through an Ethernet connection. Please make sure the manager PC must be set to the same **IP subnet address**.

For example, the default IP address of the **5G ODU** is **192.168.1.1**, then the manager PC should be set to **192.168.1.x** (where x is a number between 2 and 254), and the default subnet mask is 255.255.255.0.

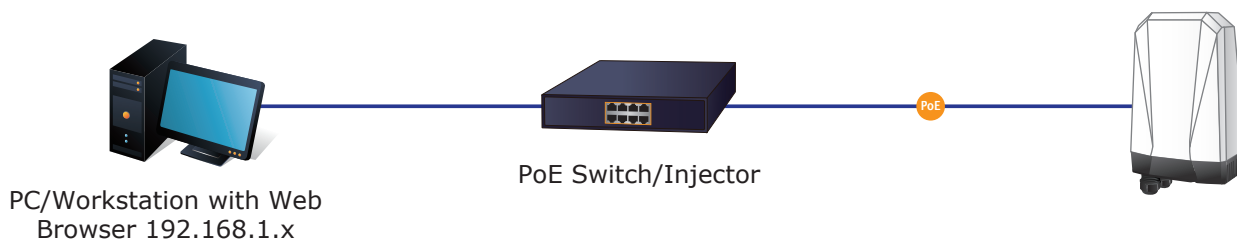


Figure 4-1: IP Management Diagram



Note

The DHCP server of the Cellular Gateway is enabled. Therefore, the LAN PC will get IP from the Cellular Gateway.

Logging in to the Cellular Gateway

1. Use your preferred web browser (such as Chrome, Edge, Firefox, etc.) and enter IP address **<https://192.168.1.1>** (the factory default IP address) to access the Web interface.
2. When the following page appears, as shown in **Figure 4-2**, enter the default username and password, or the password you previously changed.



Note

The following step is based on the firmware version before **2025**.

Default User Name: **admin**

Default Password: **admin**



Figure 4-2: Login Screen



Note

The following step is based on the firmware version of **2025 or after**.

Default User Name: **admin**

Default Password: **cg + the last 6 characters of the MAC ID in lowercase**

Find the MAC ID on your device label. The default password is "cg" followed by the last six lowercase characters of the MAC ID.

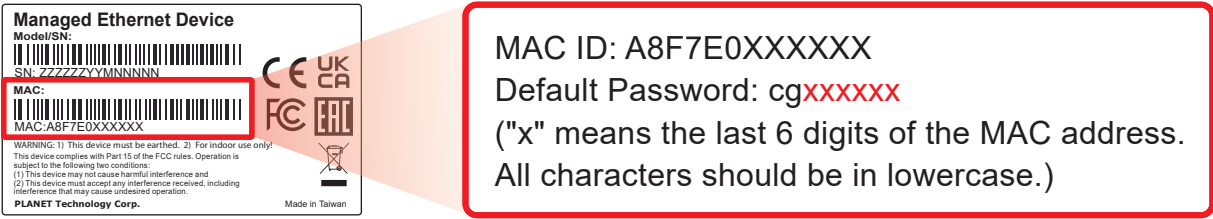


Figure 4-3: MAC ID Label

3. After entering the password, the main screen appears as shown in Figure 4-4.



Figure 4-4: Web-based Main Screen of 5G ODU

Now, you can use the Web management interface to continue the 5G ODU management or manage the 5G ODU by console interface. Please refer to the user's manual for more.

5. Recovering Back to Default Configuration

■ IP address has been changed or admin password has been forgotten –

To reset the IP address to the default IP address “**192.168.1.1**” or reset the login password to default value, press the hardware **reset button** on the rear panel for about **15 seconds**. After the device is rebooted, you can log in the management Web interface within the same subnet of 192.168.1.xx.

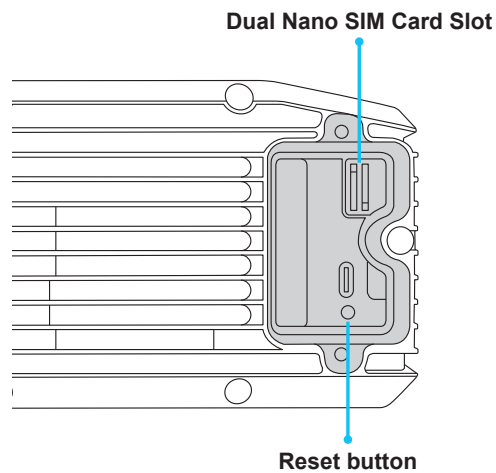


Figure 5-1: FWA-2100-NR Reset Button

6. Discovery through PLANET NMS Controller (NMS-500/NMS-1000V)

The FWA-2100-NR is the IP-based switched power manager, which can be centrally monitored by PLANET NMS Controller.

Follow the steps below to discover the managed FWA-2100-NR through PLANET NMS controller (NMS-500/NMS-1000V). Please ensure each managed FWA-2100-NR uses a different static IP in the same subnet before physically connecting to the managed network.



Note

Please regularly check PLANET website for the latest compatible list of the controller FWA-2100-NR in each firmware version.

Step 1. Launch the Web browser (Google Chrome is recommended.) and enter the default IP address <https://192.168.1.100:8888> of the NMS controller. Then, enter the default username and password “admin” to log on to the system.

* The secure login with SSL (HTTPS) prefix is required.



Step 2. Go to the "**Domain**" page, add the FWA-2100-NR ODU to the device list, and see the "**Topology View**" page where the FWA-2100-NR is monitored.

7. Customer Support

You can browse our online FAQ resource and User's Manual on PLANET Web site first to check if it could solve your issue. If you need more support information, please contact PLANET support team.

PLANET online FAQs:

<https://www.planet.com.tw/en/support/faq.php?method=keyword&keyword=FWA-2100-NR>

Support team mail address:

support@planet.com.tw

FWA-2100-NR User's Manual:

<https://www.planet.com.tw/en/support/downloads?&method=keyword&keyword=FWA-2100-NR&view=3#list>



(Please select your model name from the drop-down menu of Product Models.)

Copyright © PLANET Technology Corp. 2025.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp.

All other trademarks belong to their respective owners.